

Installation Instructions




1) Start by pulling out the hand shower from the deck of the tub.



2) Unscrew the hand shower from the tub extension hose.



3) Take the stainless steel barrel and screw it into the tapered end of the hose.

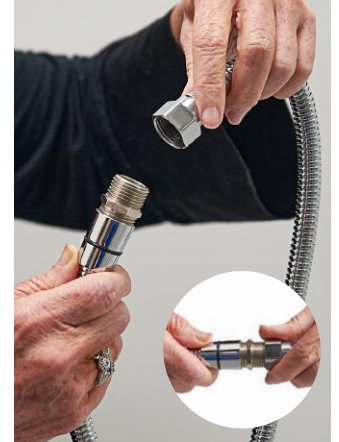

4) Connect the hose to your designated water supply (extension hose), and screw it to the opposite side of the barrel.




5) Place the barrel into the deck mounted shower base to plug the hole to prevent water leaks.



6) Align the thread of the tapered end of the hose directly to the hand shower. Hand tighten - do not use pliers or a wrench.



7) Place the hand shower into the wall mount bracket/hook.

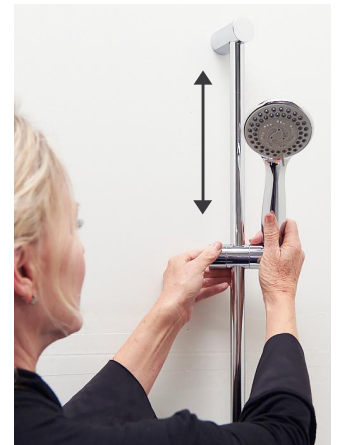

8) Use the bracket to adjust the hand shower to your desired height.